

AIR BAG (AMBER)



Illuminates, as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the air bag system. Seek qualified assistance as soon as possible.

ADAPTIVE FRONT LIGHTING SYSTEM (AMBER)



Illuminates when there is a system fault. The headlamps will still operate, but without this feature operating correctly.

Seek qualified assistance as soon as possible.

REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

LOW FUEL WARNING (AMBER)



Illuminates when the remaining fuel is low. Refuel at the earliest opportunity.

The arrow shows which side of the vehicle to locate the fuel filler cap.

TIRE PRESSURE MONITORING SYSTEM (YELLOW)



Illuminates when one or more tires are significantly under-inflated. Stop the vehicle as soon as possible, check the tire pressures and inflate to the recommended pressure.

HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent stop/start system.

Note: Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent stop/start system.

FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

HIGH BEAM ASSIST (GREEN)



Illuminates when the auto high beam feature has switched on the high beams.

TURN SIGNALS (GREEN)



The appropriate warning lamp will flash when the turn signals are operated.

HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met.