

VOICE GUIDANCE

To turn Voice guidance on or off, but maintain route guidance, proceed as follows:

1. Touch **Nav Menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key.
The soft key will be highlighted when Voice guidance is enabled.

CANCEL ROUTE GUIDANCE

To cancel Route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

QUICK POI SELECTION

1. Touch the map to display the additional options.
2. Touch the **Point of interest** (POI) soft key.
3. The screen shows 6 suggested categories, 5 of which can be selected as Quick Points Of Interest (POIs).
4. Select a Quick POI category, or touch **More** to see further POIs. Touch **Ok** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon, then touch **Set destination** to set and calculate the route.
6. Touch **GO** to start the trip.

Note: Selected POI's can be hidden if required, by selecting **Hide POI** from the Navigation menu.

Note: POI icons can only be displayed up to the 0.5 mile (1 km) zoom level.

RESTORE SYSTEM DEFAULTS

From the navigation menu, select **Nav set-up**. If you have made any changes to the system's default settings, use this menu to restore the original settings.

FAVORITES

This enables you to manage destinations such as, place of work, home, favorite restaurant.

From the favorites sub-menu in stored locations, you can save up to 400 stored favorites.

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Favorite**.
4. To store a favorite, select **Add** from the sub-menu.
5. Select any destination entry method and confirm the desired location.

FAVORITES DETAILS

1. From the **Stored locations** menu, touch **Favorite**.
2. Select **Edit** or **Delete**.
3. Touch the selected favorite to display the details.
4. Select the chosen detail to edit. Details include **Attribute**, **Name**, **Phone number**, **Location** and **Icon**.

HOME

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Home location**.
4. To store a home location, select **Add** from the sub-menu.
5. Select any destination entry method to set your home location. Touch **Ok** to confirm.