


Parking aids

USING THE PARKING AID

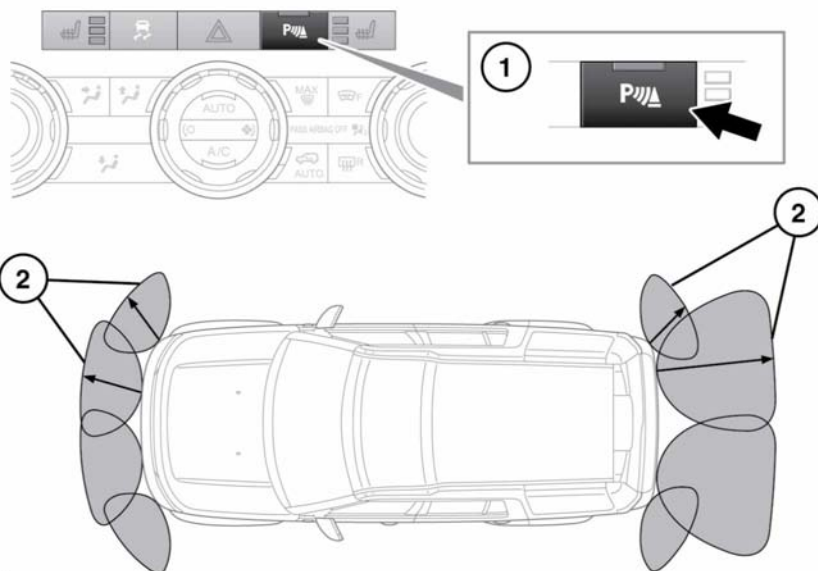

1. Parking aid switch.
2. Parking aid sensor detection zones.

⚠ WARNING

Parking aids may not detect moving objects, such as children and animals, until they are dangerously close. Always use extreme caution when maneuvering and always use your mirrors.

NOTICE

Parking Distance Control (PDC) sensors may not detect some obstructions (e.g., narrow posts, small objects close to the ground, and some objects with dark non-reflective surfaces). Parking aids are for guidance only and are not intended to replace the driver's visual checks for obstructions or objects when maneuvering.

The Parking aid system is automatically activated when the vehicle's speed decreases to less than 6 mph (10 km/h) or when Reverse (R) gear is selected. The Parking aid switch indicator will illuminate to inform the driver that the system is active. To switch the Parking aid system off, press the switch.

The Parking aid system will remain off until the next ignition cycle, Reverse (R) gear is selected, activated by the forward speed rising above 10 mph (16 km/h) and then falling below 6 mph (10 km/h), or the system is manually switched back on again.

The Parking aid system assists the driver while maneuvering the vehicle in confined spaces. When active, object tracking along the front or rear of the vehicle will be displayed on the Touch screen.