

WARNING LAMPS AND INDICATORS

RED warning lamps are for primary warnings. A primary warning must be investigated immediately by the driver or qualified assistance, before continuing.

AMBER and YELLOW warning lamps are for secondary warnings. Some indicate that a vehicle system is in operation; others indicate that the driver must take action and then seek qualified assistance as soon as possible.

GREEN and BLUE lamps within the Instrument panel indicate system status.

LAMP CHECK

A bulb check is initiated for some warning lamps when the ignition is switched on and lasts for 3 seconds (except for the air bag warning lamp which remains illuminated until the engine is started). If any warning lamp remains on after this period, investigate the cause before driving.

Some warning lamps have associated messages, displayed in the Message center.

Note: *Not all warning lamps are included in the check (e.g. High beam headlamps and turn signals).*

CRITICAL WARNING MESSAGE (RED)



Illuminates when a critical warning message is available in the Message center.

GENERAL WARNING/INFORMATION MESSAGE (AMBER)



Illuminates when a non-critical warning message or an information message is available in the Message center.

LOW OIL PRESSURE (RED)



Illuminates, as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp remains on, flashes, or illuminates while driving, stop the vehicle as soon as safety permits and switch off the engine immediately. Seek qualified assistance before continuing.

BRAKE (RED)



USA.



Canada.

Illuminates briefly, as a bulb check, when the ignition is switched on. If the lamp illuminates while driving, suspect low brake fluid level or a fault with the Electronic Brake Distribution (EBD) system.

Stop the vehicle as soon as safety permits and check and top up the brake fluid, if necessary. If the lamp remains illuminated, seek qualified assistance before continuing.

PARKING BRAKE (RED)



USA.



Canada.

Illuminates when the Electronic Parking Brake (EPB) is correctly applied. If the lamp flashes, a fault has been detected. Seek qualified assistance urgently.