# Heating and ventilation

- Press a second time to allow the rear passengers to have manual control. The upper amber light is illuminated. See 78, REAR CLIMATE CONTROL.
- Press a third time to switch off.

**Note:** The indicator lamps in the switches will illuminate when the function is selected.

**Note:** In low temperatures, it is advisable to close the center face-level vent and direct air flow from the outer face-level vents towards the side windows. This will help to keep the windows clear of ice.

# **AUTOMATIC CLIMATE CONTROL**

Press **AUTO** to select automatic operation.

The system will adjust the heat output, blower speed, air intake, and airflow distribution, to maintain the selected temperature(s) and reduce fogging without further adjustments.

The air distribution and blower controls may be operated independently to override Auto mode. If you do this, the indicator lamp on the AUTO switch will go out. Press **AUTO** again to return to automatic operation.

**Note:** The system will not achieve a temperature differential from left to right of more than 7°F (4°C).

### AUTOMATIC RECIRCULATION

When selected, the air is recirculated inside the vehicle. This helps to maintain a high or low temperature, and is useful for preventing fumes entering the vehicle.

**Note:** The windows can fog if recirculation is used for long periods.

# AIR QUALITY SENSOR

Press once to activate air recirculation. Press again to activate automatic air recirculation.

In automatic mode, air recirculation is regulated to achieve enhanced air conditioning performance.

Press a third time to switch off.

**Note:** The windows can fog if recirculation is used for long periods.

## **HEATED WINDSHIELDS**



Heated windshield.



Heated rear glass.

Press the relevent button to operate the required screen heater. The screen heater(s) will operate for a predetermined timed period before automatically switching off.

The screen heaters will be automatically switched on if Defrost mode, is activated or if the external air temperature is low.

#### NOTICE

Do not attach labels to the rear glass. Do not scrape or use abrasive materials to clean the inside of the screen.