

## STARTING THE ENGINE


### ⚠ WARNING

**Never start the engine and leave it running when the vehicle is in an enclosed space. Exhaust gases are poisonous and can cause unconsciousness and death if inhaled.**

### NOTICE

*If the engine fails to start, do not continue cranking as this will discharge the battery. It may also damage the catalytic converter due to unburnt fuel passing through the exhaust.*

**Note:** The Smart key may not be detected if it is placed within a metal container, or if it is shielded by a device with a back-lit LCD screen such as a smart phone, laptop (including when inside a laptop bag), games console, etc. Keep the Smart key clear of such devices when attempting Keyless entry or Keyless starting.

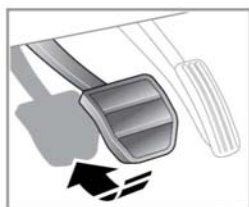

E146805



To start the engine:

1. Make sure a valid Smart key is inside the vehicle.
2. Make sure that Park (P) or Neutral (N) is selected.
3. Firmly depress the brake pedal.
4. Press and release the engine **START/STOP** button.

Once the engine has started, the brake pedal can be released, if it safe to do so.

## SWITCHING OFF THE ENGINE

**While the vehicle is stationary:**

1. Make sure the vehicle is parked with Park (P) selected and the Electronic Parking Brake (EPB) applied.
2. Press and release the engine **START/STOP** button. The engine will stop and the ignition system will return to Convenience mode.

**While the vehicle is moving:**


### NOTICE

*It is not advisable to switch off the engine while the vehicle is moving. However, if a situation arises where engine switch off is urgent, the following procedure applies:*

1. Press and hold the engine **START/STOP** button for 2 seconds, or
2. Press and release the engine **START/STOP** button twice within 2 seconds.

In either case, a warning will be displayed to the user, **Engine Stop Button Pressed**.

## SWITCHING ON THE IGNITION

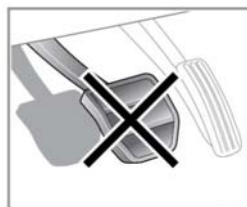

E146806



To switch on the ignition without starting the engine:

1. Make sure the brake pedal is not depressed and that a valid Smart key is inside the vehicle.
2. Press and hold the engine **START/STOP** button until the warning lamps illuminate.
3. Release the engine **START/STOP** button.