

- Touch and release once to play random tracks from the current CD, MP3 folder, USB folder, or iPod playlist. A **Shuffle** message is displayed.
- Touch and release again to play random tracks from CD, MP3 disc, USB folders or tracks on the media device, or tracks loaded onto the CD store. **Shuffle all** is displayed.
- Touch and release again to cancel Shuffle mode.

Note: Shuffle mode is not available for **Bluetooth®** wireless technology devices.

12. Skip/Scan backward:

- Touch and release within 3 seconds of track playback to skip to the previous track.
- Touch and release after 3 seconds of track playback to skip to the beginning of the current track.
- Touch and hold to scan backwards through the current track. Playback will resume when the soft key is released.

PORTABLE MEDIA CONNECTIONS

Portable media devices can be connected to the front media hub, located in the cubby box. Rear seat passengers can connect at the rear of the center console. Compatible portable devices include:

- USB mass storage devices (e.g., a memory stick). Devices must use FAT or FAT32 file format.
- iPod® (iPod Classic, Touch, Nano and iPhone® are supported - full functionality for older devices cannot be guaranteed). iPod Shuffle functionality cannot be guaranteed.
- Auxiliary device (personal audio, MP3 players, all iPods).

Note: Auxiliary devices have no Touch screen control.

If you are connecting an iPod, mass storage, or **Bluetooth®** wireless technology device, use the Touch screen to operate and search the device. Many of the controls are similar to those available for CD play.

NOTICE

Please disconnect your iPod when leaving the vehicle. Failure to do so may result in the iPod battery discharging.

Note: The Audio system will play MP3, WMA, and AAC files.

To maximize playback quality, it is recommended that lossless compression is used for any media files on USB or iPod. Failing this, it is recommended that compressed files utilize a minimum bitrate of 192 kb/s (a higher bitrate is strongly recommended).

Note: iPod and iPhone are registered trademarks of Apple Inc., registered in the U.S. and other countries.

Note: Some MP3 players have their own file system that is not supported by this system. To use your MP3 player, you must set it to USB Removable Device or Mass Storage Device mode. Only music that has been added to the device in this mode can be played.

For a list of compatible **Bluetooth®** wireless technology devices, please refer to the Land Rover website at www.landrover.com.

The **Bluetooth®** wireless technology devices listed have been tested for compatibility with Land Rover vehicles. Performance will vary, based on the device's software version and battery condition. Devices are warranted by their manufacturer, not Land Rover.