


- The engine has been switched off for 10 minutes, as the system will not give an accurate reading until the oil level has stabilized.

The oil level can then be checked as follows:

1. Switch on the ignition (do not start the engine).
2. Make sure Park (P) is selected.
3. Select the **Service Menu** using the Instrument panel menu controls on the steeringwheel. See **48, INSTRUMENT PANEL MENU**.

Select **Oil level display** from the Service menu. The current oil level status and topping up advice is displayed in the Instrument panel, top up as instructed.

An indication of the oil level is displayed in the gauge. Messages to the right of the gauge advise you of any action you may need to take.

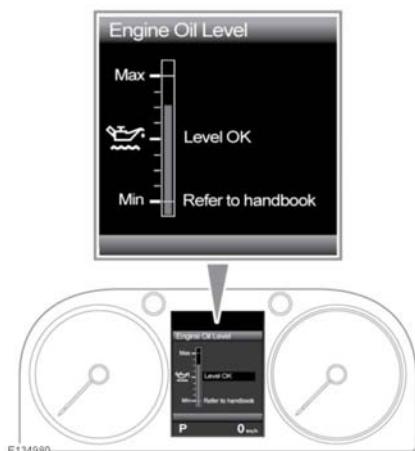

If the oil level is within the required operating range, the message **Engine Oil Level OK** will be displayed. Do not add any additional oil to the engine.

If the oil level is below the required operating range, a message advising you of how much oil to add will be displayed (e.g. **Add 1 Pint**). Add the recommended quantity of oil.

If the message **Engine Oil Level Overfilled** is displayed, seek qualified assistance immediately. Do not drive the vehicle as this will cause serious damage to the engine.

If the message **Engine Oil Level Underfilled** is displayed, add 3.2 U.S. pints (1.5 liters) of oil, then recheck the level.

If the message **Engine Oil Level Not Available** is displayed, the oil level is stabilizing. Switch off the ignition, wait for 10 minutes, then recheck the oil level display.

If the warning message **ENGINE OIL LEVEL MONITOR SYSTEM FAULT** is displayed, seek qualified assistance.

TOPPING UP THE OIL

NOTICE

Your vehicle's warranty may be invalidated if damage is caused by using oil that does not meet the required specification.

NOTICE

Failure to use an oil that meets the required specification could cause excessive engine wear, a build up of sludge and deposits, and increase pollution. It could also lead to engine failure.

NOTICE

Overfilling with oil could result in severe engine damage. Oil should be added in small quantities and the level rechecked to make sure that the engine is not overfilled.

1. Remove the oil filler cap.
2. Add oil as instructed by the dipstick display.
3. Clean up any oil spilled during topping up.
4. Check the oil level again after 10 minutes.