

3. Select **Avoid points**.
4. From the sub-menu, select **Edit** or **Delete**.

## EASY ROUTE

In **Route options**, **Easy Route** can be turned **On** or **Off**.

When **On** is selected, **Easy Route** changes the calculation parameters of **Route 3** in order to reduce:

- Junctions.
- Turns.
- Turns that cross traffic.
- The priority of minor roads.
- Complex junctions and manoeuvres.

## LEARN ROUTE

In **Route options**, **Learn Route** can be turned **On** or **Off**.

When **On** is selected, if you make the same deviation from the proposed route 3 times, then the system will memorise the deviation and offer that as the normal route from then on. Select **Reset all routes** to delete any learnt routes and return to the default settings.

## VOICE GUIDANCE

To turn Voice guidance on or off but maintain route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Route voice guidance** soft key. The soft key will be highlighted when Voice guidance is enabled.

## CANCEL ROUTE GUIDANCE

To cancel route guidance, proceed as follows:

1. Touch **Nav menu** on the navigation screen.
2. Touch the **Cancel guidance** soft key.

## QUICK POI SELECTION

1. Touch the map to display the additional options.
2. Touch the **Point of interest** (POI) soft key.
3. The screen shows 6 suggested categories, 5 of which can be selected as Quick Points Of Interest (POI's).
4. Select a Quick POI category, or touch **More...** to see further POIs. Touch **OK** to confirm a selection.
5. The map with the POI icon(s) is displayed. Scroll the map to the POI icon, then touch **Set destination** to set and calculate the route.
6. Touch **GO** to start the journey.

**Note:** Selected POI's can be hidden if required, by selecting **Nav menu** followed by **Hide POI**.

**Note:** POI icons can only be displayed up to the 1 km (½ mile) zoom level.

## RESTORE SYSTEM DEFAULTS

From the Navigation menu, select **Nav set-up**. If you have made any changes to the system's default settings, use this menu to restore the original settings.

## FAVOURITES

This enables you to manage destinations such as, place of work, home, favourite restaurant.

From the favourites sub-menu in stored locations, you can save up to 400 stored favourites.

1. From the **Nav menu**, touch **More....**
2. Select **Stored locations**.
3. Touch **Favourite**.
4. To store a favourite, select **Add** from the sub-menu.