

Dialling:

- With **PHONE** selected, use the numeric keypad to enter a telephone number.
- Press **OK** on the audio control panel or the steering wheel phone control (2) to dial the number.

Call volume:

The phone call volume is operated by the Audio system's volume control.

If the Audio system is in use when a phone call is active, the audio source is suppressed for the duration of the call. Parking aid warnings are not suppressed.

TIME AND DATE SETTINGS

To set/change the time and date:

- Press the MENU button (12).
- Select **Clock Settings** on the screen menu, by using the menu navigation control (10).
- Select a clock function; make changes.
- Once the change has been entered, press **OK**.

MP3 FILE PLAYBACK

MP3 discs have the potential to hold more music than a conventional CD, because each track can be compressed to a higher degree during recording.

The normal playing sequence on CDs with multiple folders, is to play the tracks within the top level first, then the tracks in any sub-folders.

Note: *The CD player may take a long time to load an MP3 disc if it contains a lot of tracks.*

To select a track from the MP3 track list:

- Press the right side of the menu navigation control (10) to access the currently playing MP3 folder.

If required, press the left side to access the folder list.

- Press the up or down arrows on the menu navigation control, to scroll to the required track or folder.
- Press the **OK** button to play the selected track, or open the selected folder.

MP3 REPEAT AND SHUFFLE

When an MP3 CD is playing, playback options include **Repeat** and **Shuffle**.