

### Dialling:

- With **PHONE** selected, use the numeric keypad to enter a telephone number.
- Press **OK** on the audio control panel or the steering wheel phone control (**2**) to dial the number.

### Call volume:

The phone call volume is operated by the Audio system's volume control.

If the Audio system is in use when a phone call is active, the audio source is suppressed for the duration of the call. Parking aid warnings are not suppressed.

## TIME AND DATE SETTINGS

To set/change the time and date:

1. Press the MENU button (**12**).
2. Select **Clock Settings** on the screen menu, by using the menu navigation control (**10**).
3. Select a clock function; make changes.
4. Once the change has been entered, press **OK**.

## MP3 FILE PLAYBACK

MP3 discs have the potential to hold more music than a conventional CD, because each track can be compressed to a higher degree during recording.

The normal playing sequence on CDs with multiple folders, is to play the tracks within the top level first, then the tracks in any sub-folders.

**Note:** *The CD player may take a long time to load an MP3 disc if it contains a lot of tracks.*

To select a track from the MP3 track list:

1. Press the right side of the menu navigation control (**10**) to access the currently playing MP3 folder.  
If required, press the left side to access the folder list.

2. Press the up or down arrows on the menu navigation control, to scroll to the required track or folder.
3. Press the **OK** button to play the selected track, or open the selected folder.

## MP3 REPEAT AND SHUFFLE

When an MP3 CD is playing, playback options include **Repeat** and **Shuffle**.