


## RADIO CONTROLS

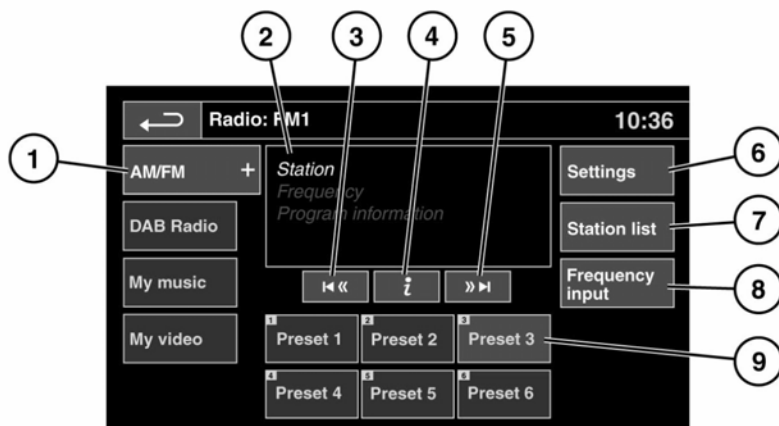

E 154787



**In the interest of safety, only operate or adjust the system when it is safe to do so.**



**Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.**

1. **AM/FM:** Waveband selection: Touch to view and select a waveband. The radio will tune to the last used station on that waveband. Touch again to close.  
The waveband selection box will close automatically after 5 seconds without use.
2. Displays information about the current station.
3. Seek down:
  - Short touch to auto seek down the frequency to the next radio station.
  - Long touch to activate manual seek mode. Further short touches change the frequency in single decrements. A further long touch will scan backwards through the current waveband until the soft key is released.
4. Information: More information from the broadcasting station.
5. Seek up:
  - Short touch to auto seek up the frequency to the next radio station.
  - Long touch to activate manual seek mode. Further short touches change the frequency in single increments. A further long touch will scan forwards through the current waveband until the soft key is released.
6. **Settings:** Touch to view and activate/deactivate the following features: **RDS, Traffic, News, AF and REG.** See **92, RADIO DATA SYSTEM (RDS).**

*Note: When manual seek is selected, auto seek cannot be selected for approximately 10 seconds.*