

- hill descent.....73
 - shift paddles.....73
 - temporary manual selection.....73
 - Auto mode (climate).....56
 - Autostore
 - storing radio stations.....130
 - using a stored radio station.....130
 - Auto zoom (navigation).....116
 - Auxiliary device connection.....99
 - Auxiliary heater.....57
- B**
- Battery
 - boost starting.....170
 - care.....168
 - charging.....171
 - connecting jump leads.....169
 - effects of disconnection.....172
 - replacing.....171
 - using a starting aid.....170
 - warning lamp.....34
 - Bluetooth
 - compatibility.....108
 - pairing
 - via the phone.....108
 - portable media
 - pairing.....100
 - playing.....99
 - telephone.....107
 - icons.....110
 - overview.....107
 - pairing.....109
 - phonebook.....111
 - safety.....108
 - Bonnet
 - closing.....150
 - opening.....150
 - Booster seats for larger children.....25
 - Boost starting.....170
 - Brakes
 - ABS warning lamp.....36
 - brake pads.....147
 - control with ABS.....75
 - electronic brake force distribution.....75
 - emergency brake assist.....75
 - fluid check.....165
 - fluid specification.....165
 - fluid top up.....165
 - handbrake.....76
 - important information.....75
 - parking brake warning lamp.....35
 - steep slope control.....75
 - warning lamp.....34–35
 - Brake temperature.....84
 - Bulbs
 - changing a bulb.....152
 - direction indicator.....156
 - front fog lamp.....156
 - halogen.....153
 - headlamp.....153
 - interior bulbs replacement.....159
 - licence plate.....158
 - number plate.....158
 - rear lamp.....157
 - side repeater lamp.....157
 - specification.....206
- C**
- Call volume.....111
 - Cameras
 - rear camera.....78
 - Cancelling an announcement
 - standard audio system.....132
 - Capacities.....203
 - CD loading.....135
 - CD player
 - CD loading.....87
 - portable media pairing.....100
 - portable media playing.....99
 - standard audio system.....135–136
 - CD player (Standard).....135
 - adaptive volume control.....130
 - bass and treble setting.....130
 - connecting portable media devices.....136
 - controls.....129
 - loading.....135
 - MP3 file playing.....139
 - repeat and shuffle.....136