

# Heating and ventilation


- If the vehicle's battery charge is low.
- If the coolant temperature is at or above its required temperature.

## SETTING A TIME FOR TIMED CLIMATE OPERATION

The Touch screen can be used to either preset activation times or to operate the system manually.

When the system is operating, the LED in the Climate control **AUTO** or **A/C** button will flash. **AUTO** indicates the engine or cabin are being heated. **A/C** indicates that the cabin is being ventilated. The choice of operation is automatically determined by the system, depending on external temperature.

**Note:** The system will cease operation when the engine is started.

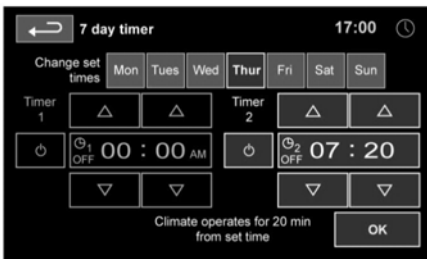

E140084

To set a Timed climate programme:

1. Press the **HOME MENU** hard key.
2. Touch the **Timed Climate** soft key. This soft key may be set on a personal shortcut or accessed via the **Extra Features** soft key. Select **7 day timer**, or **single event**, then select the timer button. If 7 day timer is selected, then select the day for which you want to set a programme. Alternatively, select **All Week** to select the same start time for every day.

3. Touch the **Timer 1** or **Timer 2** icon. The timers can be toggled between on and off by using the power soft key.
4. Touch the up or down arrows to set the start time. Hours and minutes are adjusted separately.
5. Touch **OK**. The screen will display the activation time. If required, set the time for the other timer, using the same process.
6. Once set, the timer events can be turned on or off, as required, in the **Timed climate** screen, by selecting the **7 day timer** or the **single event** soft key.

**Note:** Set times should to be programmed 20 minutes before the planned journey.

**Note:** The time format, 12/24 hour clock, is determined by the time settings currently selected in the **Vehicle Set-up** menu. See **31, INSTRUMENT PANEL MENU**.

**Note:** Timed climate will only operate once between engine starts. For example, a remote Timed climate request will not be performed if a programmed Timed climate event has already occurred.

A current heating cycle will be cancelled if the engine is started. Any programmed heating cycle may be cancelled by touching the relevant power soft key on the timer setup menu, or the **Power** soft key on the **Timed Climate** information home menu.