

- If you have selected a digital service which has an equivalent FM service in the area and your digital service has deteriorated, then the radio will automatically switch to the alternative FM service until the digital reception becomes adequate again.

We advise that ServiceLink is switched off when searching for ensembles or using Manual Tuning.

### DAB DISPLAYED MESSAGES

'**Searching....**' is displayed when the radio is tuning itself to the correct ensemble. You will see this for a few seconds during some preset changes and when seeking up or down to another ensemble.

If ServiceLink is enabled and no alternative signal can be found, 'Searching....' may show for a long period of time, since in this mode the radio will continue to search round all the bands automatically until you command it to go to a different service or switch off ServiceLink.

'**No Reception**' is displayed when ServiceLink is not enabled and you have selected a service which cannot be received in the vehicle's current position. Select an alternative service, or search for an alternative ensemble.

'**Serv00**', '**Serv01**' etc. may be shown when the radio can detect signals from an ensemble but cannot decode the service names. These are default labels to replace the non-receivable service names. In these cases, the audio is generally impossible to receive from the vehicle's current location. Select an alternative service, or search for an alternative ensemble.

### CD PLAYER



Do not use discs with paper labels, dual discs or DVDPlus discs. The front loading CD player may load and play this type of disc, however it is likely that the disc will not eject and will block the CD mechanism. Such damage to a CD player will not be covered under warranty.



Do not force the disc into the slot.

**Note:** *Copy-protected CDs may fail to play in your CD changer or may be played subject to various limitations (for example, sound quality may be impaired). If you experience a problem, try the CD in other players before contacting the CD vendor.*

### LOADING A COMPACT DISC

Gently place a CD into the loading slot, the disc will be drawn into the player and loaded.

Press the CD button on the fascia to select CD playback mode.

If a CD is already loaded, playback will resume from the point of last play.

### TRACK SELECTION

When playing a CD, the display will show the current track being played, the total number of tracks on the CD and the time elapsed since the current track began to play.

You can move to the previous or next track by briefly pressing the backwards or forwards seek buttons on either the audio unit or steering wheel.

Pressing and holding the seek buttons will fast forward or rewind the CD.

To select a track from the CD track list:

1. Press the right side of the menu navigation control (**10**) to access the CD track list.