


DRIVING POSITION MEMORY

Once you have adjusted the power-operated driver's seat and exterior mirrors (see **44**, **EXTERIOR MIRRORS**) the vehicle can memorise these settings for future use.

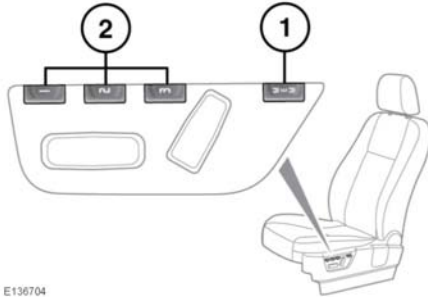

E136704

1. Press the memory store (**MEM**) button to activate the memory function.
2. Press one of the preset buttons within 5 seconds to memorise the current settings. **MEMORY (1, 2 or 3) SETTINGS SAVED** will be displayed in the Message centre, accompanied by an audible chime to confirm that the settings have been memorised.
3. To recall a stored position, press the relevant preset button. **MEMORY (1, 2 OR 3) RECALLED** will be displayed in the Message centre.

A seat position will only be memorised during the 5 second active period.

Any existing settings will be over-written when programming a memory position.