


## ELECTRIC WINDOWS

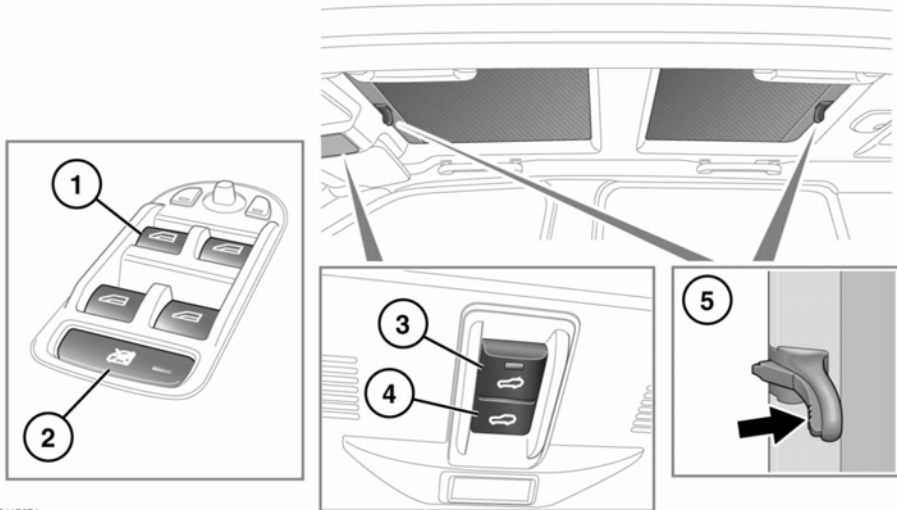

E147274

## 1. Window switches:

**Note:** The windows will operate for 5 minutes after the engine is switched off, as long as none of the doors are opened.

## 2. Rear window isolator button:



**Make sure you remove the Smart key when leaving the vehicle. This will prevent unsupervised operation of the windows, which may result in an injury.**



**If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.**

## 3. Sunroof close/tilt switch:



Wherever possible, remove any snow, ice, dirt, and leaves etc. from the sunroof mechanism before closing. Failure to do so may damage the sunroof mechanism.

- With the roof closed, briefly press to tilt the sunroof open.
  - With the roof fully open, briefly press to close the roof.
- Press the button again to stop movement.

## 4. Sunroof open/close switch:

- With the roof closed, briefly press to fully open. Press again to stop movement.
- With the roof tilted open, press and hold to close the roof. Releasing the switch will stop roof movement.

**Note:** The sunroof will only operate when the ignition is on.

## 5. Sun blind: