

- Traffic information
 - standard audio RDS.....132
 - Traffic message channel (TMC).....124
 - Trailer
 - electrical connections.....66
 - weights
 - maximum weights.....66
 - Trailer direction indicators warning lamp.....37
 - Transmission
 - automatic.....72
 - fault.....73
 - gear shift warning lamp.....36
 - hill descent.....73
 - manual.....73
 - Transmitters
 - smart key.....207
 - Trip computer.....32
 - average speed.....32
 - fuel consumption.....32
 - fuel range.....33
 - reset.....32
 - trip distance.....33
 - Tyre pressure checking after a repair.....192
 - Tyre pressure monitoring system (TPMS)..188
 - full size replacements.....189
 - tyre care.....183
 - valves.....184
 - warning lamp.....36
 - Tyre repair kit
 - checking pressures.....192
 - repair procedure.....191
 - safety information.....190
 - using.....190
 - Tyres
 - age degradation.....186
 - changing.....189
 - flat spots.....186
 - full size replacements.....189
 - important information.....196
 - Indian regulations.....187
 - pressures.....183
 - punctured.....184
 - repair kit.....190
 - repair kit use.....190
 - repair procedure.....191
 - replacements.....184
 - snow chains.....186
 - speed ratings.....183
 - temporary use spare.....189
 - TPMS.....188
 - warning lamp.....36
 - TPMS pressure compensation.....186
 - tyre care.....183
 - tyre repair safety.....190
 - tyre wall markings.....182
 - use of spare tyre.....196
 - valves.....184
 - wall markings.....182
 - winter.....185
- ## U
- Under body cleaning.....161
 - Under bonnet covers.....152
 - Unlocking.....9
 - all doors.....4
 - driver's door.....4
 - global opening.....4
 - mode.....4
 - multi point entry.....4
 - single point entry.....4
 - USB devices
 - connecting multiple devices.....99
 - Used engine oil.....150
 - Using cruise control.....80
 - Using the parking aids.....77
 - Using the spare tyre
 - important information.....196
- ## V
- Valet mode.....53
 - deselecting.....53
 - Vehicle alarm.....147
 - Vehicle battery
 - connecting jump leads.....169
 - effects of disconnection.....172
 - replacing.....171
 - warning symbols.....168