

## Warning lamps

### ANTI-LOCK BRAKING SYSTEM (ABS) (AMBER)



Illuminates briefly, as a bulb check, when the ignition is switched on.

If the lamp remains on or illuminates while driving, there is a fault with the ABS system. Drive with care, avoiding heavy brake application and seek qualified assistance urgently.

### AIRBAG (AMBER)



Illuminates, as a bulb check, when the ignition is switched on and extinguishes when the engine is started.

If the lamp illuminates when driving, there is a fault with the Airbag system. Seek qualified assistance as soon as possible.

### REAR FOG LAMP (AMBER)



Illuminates when the rear fog lamps are switched on.

### EXTERNAL TEMPERATURE (AMBER)



Illuminates when the external temperature is low enough that ice may be present on the road.

### TYRE PRESSURE MONITORING SYSTEM (YELLOW)



The warning lamp illuminates, accompanied by a message in the Message centre, to warn that one or more tyres are significantly under-inflated. Stop the vehicle as soon as possible, check the tyre pressures and inflate to the recommended pressure.

The lamp will flash to indicate a system fault.

### HIGH BEAM (BLUE)



Illuminates when the high beam headlamps are switched on or flashed.

### GEAR SHIFT (GREEN)



The gear shift indicator illuminates briefly at the recommended gear change point (upshift).

The gear shift indicator will not illuminate while Cruise control is active and not being overridden by pressing the throttle pedal.

**Note:** This warning indicator is only a guide. It remains the responsibility of the driver to operate the vehicle in an appropriate manner for the prevailing conditions.

### INTELLIGENT STOP/START (GREEN)



Illuminates when the engine is shut down by the Intelligent Stop/Start system.

**Note:** Other warnings normally associated with an engine shutdown, for example, the ignition warning lamp, do not illuminate during an engine shutdown by the Intelligent Stop/Start system.