


Interior lights

INTERIOR LIGHTS

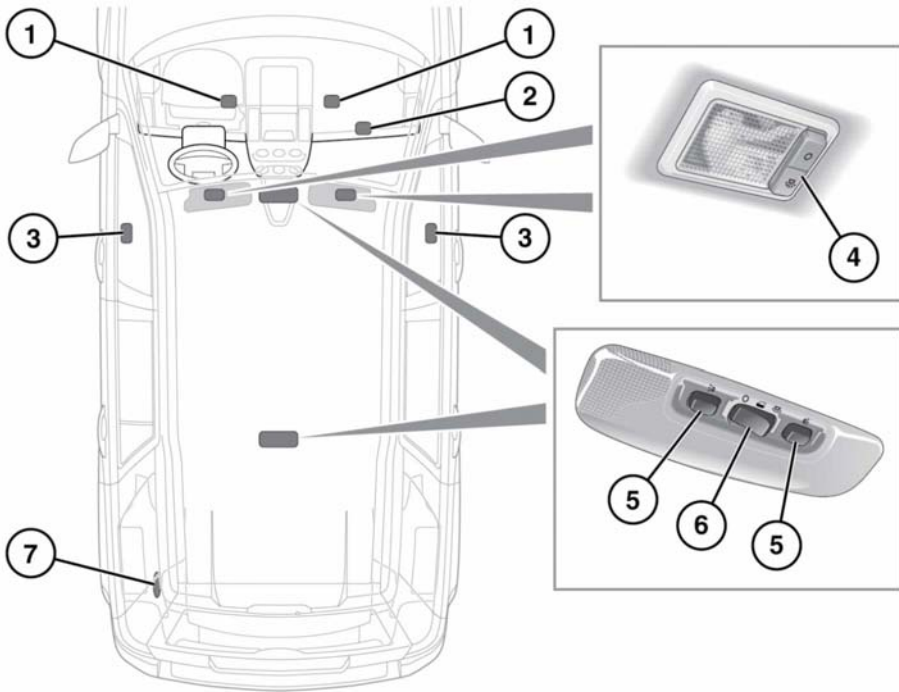

E145581

1. Footwell lamps.
2. Glove box lamp.
3. Puddle lamps.
4. Sun visor lamps.
5. Map light controls (on/off).
6. Main interior lamp control (on/off/Auto).
To activate or deactivate Auto mode, press and hold for longer than 3 seconds. In Auto mode, the lamps will illuminate when a door is opened.
7. Luggage compartment lamp.