

## SIDE LAMPS (GREEN)



Illuminates when the side lamps are switched on.

If a trailer is attached, the warning lamp will flash in conjunction with the direction indicator warning lamp. If the lamp fails to flash, the direction indicator bulb on the trailer may be faulty.

## FRONT FOG LAMPS (GREEN)



Illuminates when the front fog lamps are switched on.

## DIRECTION INDICATORS (GREEN)



The appropriate warning lamp will flash when the direction indicators are operated.

## HILL DESCENT CONTROL (GREEN)



Illuminates continuously when HDC is selected and HDC operating conditions are met. See **83, HDC OPERATION**.

If the lamp flashes, HDC has been selected, but the operating conditions are not being met or HDC fade-out is occurring.

## CRUISE CONTROL (GREEN)



Illuminates when Cruise control is active.

## TRAILER DIRECTION INDICATORS (GREEN)



Illuminates, as a bulb check, when the ignition is switched on and extinguishes when the engine is started.