


VIDEO MEDIA PLAYER CONTROLS

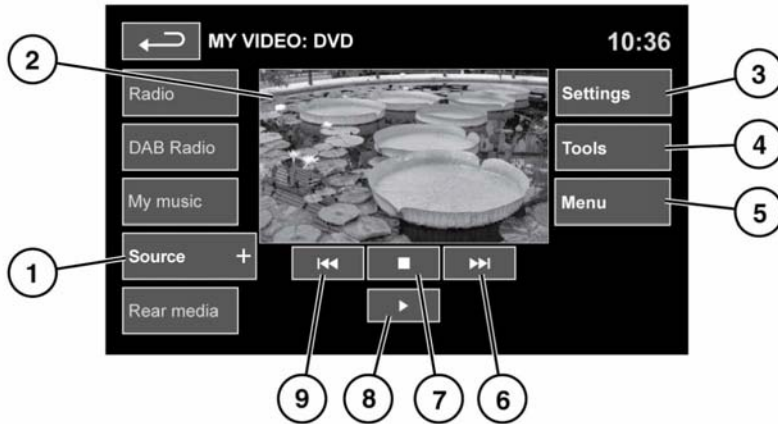

E151161

- 1. Source:** Video input selection. Touch to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.
Note: After 5 seconds without use, the My video menu will close.
- 2. Preview screen for video media information:** Touch to select full screen mode. Short touch the screen again to view the controls at any time. To return to preview mode, touch and hold the full screen view.
- 3. Settings:** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**. **VOD** allows playing of DivX VOD content from a video media. The 8 digit registration code will be displayed when the VOD soft key is touched. The player must also be registered with DivX. See **87, LICENSING**.
- 4. Tools:** The following options can be selected:
 - **GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
 - Subtitles.
 - Angle.
 - Audio.
 - Top menu.
- 5. Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.
- 6. Seek up:** Select to view the next DVD chapter or to scroll through video media files.
- 7. Select to pre-stop playback.** A second touch will stop and reset the DVD.
- 8. Select to start/restart play.**
- 9. Seek down:** Select to view the previous DVD chapter or to scroll through video media files.