
FUSE BOX LOCATIONS

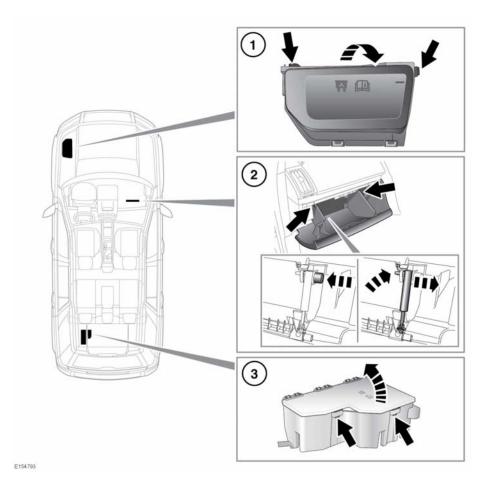

- When a fuse box lid is removed, take care to protect the box from moisture, and refit the lid at the earliest opportunity.
- 1. Engine compartment fuse box.
 - The fuse numbers and positions are shown on the inside of the fuse box cover.
- 2. Passenger compartment fuse box.
 - Open the glove box. See **61**, **STORAGE COMPARTMENTS**.
 - Lower the glove box by lightly pushing in at each support stay at the top of the left and right corners.