
## Maintenance


## **HEADLAMP BULB REPLACEMENT**

## Combined xenon and halogen

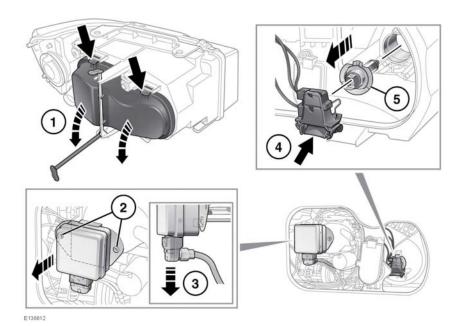

- 1. Unclip the locking lever, press down the 2 tabs and remove the cover.
- 2. Undo the 2 retaining screws and remove the xenon unit.
- 3. Remove the connector from the xenon unit.
- 4. Pull the connector off of the halogen bulb.
- **5.** Unclip the halogen bulb and remove it from the unit.

## **Halogen Only**

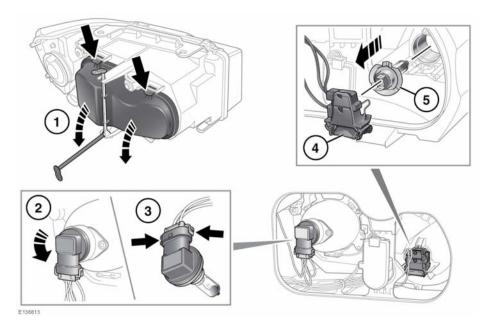

- 1. Unclip the locking lever, press down the 2 tabs and remove the cover.
- 2. Pull the halogen dipped beam connector off of the bulb.
- Take care not to touch this type of bulb with your fingers; always use a cloth to handle them. If necessary, clean the bulb with methylated spirits to remove fingerprints.
- 3. Unclip the bulb and remove it from the unit.
- **4.** Pull the main beam connector off of the bulb.
- 5. Unclip the bulb and remove it from the unit.