

5. Press to answer an incoming call. Press and release to dial a number/contact. Press and release to access the Last 10 dialled list. Press and hold to access phonebook list view.
6. Press to end a call or to reject an incoming call.

**Note:** When scrolling through a phonebook or the Last 10 list, each contact is also displayed in the Message centre.

**Note:** In order to scroll through any Last 10 list, the 'phone' button (5) must first be pressed.

## CALL VOLUME

The phone call volume is operated by the Audio system's volume control.

If the Audio system is in use when a phone call is active, the Audio system source is suppressed for the duration of the call.

## PHONEBOOK

Contacts stored in the memory of a paired phone can be automatically downloaded to the vehicle's phonebook each time the phone is connected to the system.

Certain phones store the phonebook in 2 different areas, the SIM card and the phone memory. The vehicle's system will access only those numbers stored in the phone's memory.

To access contacts from the phonebook:

1. From the **Phone** menu, select **Phonebook**.
2. Using the keyboard, select the letter you wish to search under.
3. Select **List** to view the phonebook.
4. Identify the required contact from the displayed list and touch to call. If a contact has more than 1 number stored, select the required number from the list.

**Note:** It may be necessary to use the scroll bar to see the entire list.

There are also options to view more contact information, by selecting the corresponding i key.

If your phone supports contact type data, you will be able to see a contact type icon in the vehicle's phonebook directory. These can be seen on the right side of each contact in the directory and will indicate one of the following types:



Default.



Mobile.



Home.



Work.