

**Note:** Due to the duration of a **Bluetooth®** wireless technology search, it is advised that the time out to home screen feature is switched off before attempting to search for **Bluetooth®** wireless technology devices. This setting can be changed within **Set-up, Screen, Time out home**.

## **CHANGING/DISCONNECTING A DEVICE**

1. From the **Bluetooth** menu, select **Change device**.
2. Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.