Note: Due to the duration of a Bluetooth® wireless technology search, it is advised that the time out to home screen feature is switched off before attempting to search for Bluetooth® wire less technology devices. This setting can be changed within Set-up, Screen, Time out home.

CHANGING/DISCONNECTING A DEVICE

- 1. From the **Bluetooth** menu, select **Change** device.
- 2. Select **Disconnect**. A confirmation pop-up will appear and then you will be given the option to **Search new** or select a different device from the list of paired devices.