
Steering wheel

ADJUSTING THE STEERING WHEEL

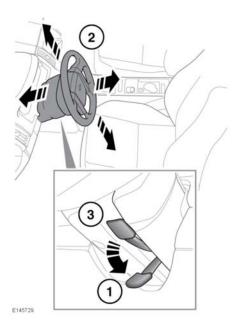

 \triangle

Never adjust the steering column while the vehicle is in motion.

- 1. Move the lever fully down to unlock the column.
- 2. Move the steering column up, down, in or out, to the desired position.
- 3. Move the lever fully up to re-lock the column.