


# Steering wheel

## ADJUSTING THE STEERING WHEEL

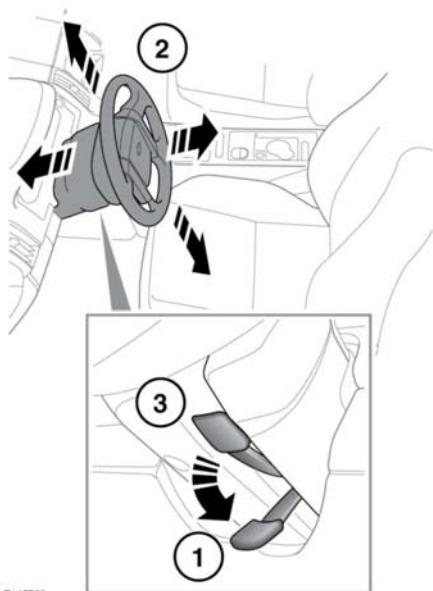

E145729

**⚠ Never adjust the steering column while the vehicle is in motion.**

1. Move the lever fully down to unlock the column.
2. Move the steering column up, down, in or out, to the desired position.
3. Move the lever fully up to re-lock the column.