


Mirrors

EXTERIOR MIRRORS

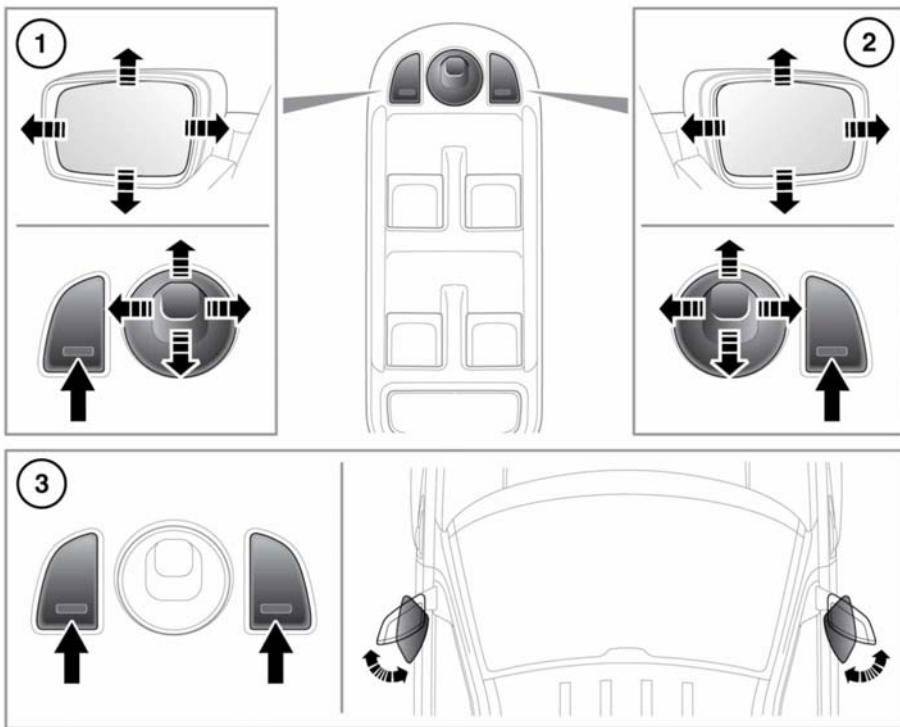

E147278

1. Left mirror adjustment.
2. Right mirror adjustment.
3. Press both switches together to fold/unfold the mirrors.

Note: The mirrors can be adjusted for up to 5 minutes when the ignition is switched off, provided the driver's door is not opened.

Note: If the mirrors are manually folded or knocked into the folded position accidentally, the mirror head will be loose. To re-engage the mechanism, fold, then unfold the mirrors using the switches.

A thermal cut-out switch will temporarily disable the power-fold feature if the switches are operated repeatedly.

Power-fold will only operate if the vehicle is stationary, or travelling at 20 km/h (12 mph) or less.