

It is not possible to manually reset the Auto trip memory. This resets automatically each time the ignition is switched on.

Trips may be added together, to record a continuous journey, or removed. Press the **i** button for longer than 1 second, when Auto trip memory values for distance, average speed or average fuel economy are displayed, then **adding last journey** or **removing last journey** will appear on the screen. Press the **i** button for longer than 1 second, and the previous trip information will be added to or removed from the current trip and the new total will be displayed.

TRIP DISTANCE

Distance travelled since the last memory reset. The maximum trip reading is 9 999.9 (kilometres or miles). The computer will automatically reset to zero if this distance is exceeded.

RANGE

This shows the predicted distance (kilometres or miles) that the vehicle should travel on the remaining fuel, assuming fuel consumption stays constant.

METRIC/IMPERIAL/MIXED DISPLAY

The Trip computer readings can be changed between metric, imperial and mixed units via **Trip Computer** in the Instrument panel menu. See **31, INSTRUMENT PANEL MENU**.

Note: *Temperature display can be changed between **°C** (Celsius) and **°F** (Fahrenheit) independently of Metric or Imperial units.*