


## **TOWING EYES**

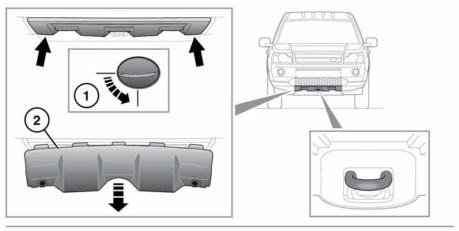

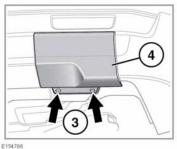

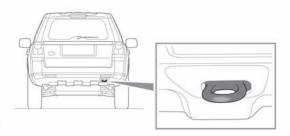



The towing eyes at the front and rear of the vehicle are designed for on-road recovery only. If they are used for any other purpose, it may result in vehicle damage and serious injury.

- Remove the front and rear towing eye covers before driving off-road, to prevent damage or loss.
- Remove the body styling kit for access to the rear towing eye.

The front towing point is located behind a removable cover in the lower front bumper.

- 1. Using a suitable tool, rotate each of the fasteners 90 degrees anticlockwise.
- 2. To remove the cover, lower the top edge and then pull the cover forward.

  To refit, offer up the cover and make sure the 2 lugs at the bottom edge engage with the holes in the body panel.
- **3.** Using a suitable tool, rotate each of the fasteners 90 degrees anticlockwise.
- 4. Remove the cover.