

# Touch screen

## TOUCH SCREEN USE

- ⓘ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.
- ⓘ Avoid spilling or splashing liquids onto the Touch screen.

## TOUCH SCREEN CARE

- ⓘ Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

## TOUCH SCREEN SETUP

Select **Setup** from the **Home menu**.

The set up screen is divided into categories:

- Screen.
- System.
- Voice.
- Audio.

## SCREEN SETTINGS

**Volume pop-up:** Displays the Volume pop-up on/off icon.

**Screensaver:** Change screensaver.

**Time out home:** Sub-menu selection screens can be set to revert to the **Home menu** after a predetermined length of time.

**Theme:** Changes appearance of the Touch screen soft keys.

## SYSTEM SETTINGS

**Button feedback:** Select to turn the soft key confirmation tone on/off.

**Clock adjust:** Select **12** or **24** hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

**Note:** *The clock can also be adjusted from the Touch screen time display.*

**Home menu shortcuts:** Select up to 2 items from the displayed list to appear as shortcuts on the **Home menu**. Select **Clear** to deselect highlighted items.

**Language:** Select the required language. Select **Male** or **Female** voice. Touch **Change** to select alternatives for voice and text displays. Follow the on-screen instructions to confirm.

**Note:** *Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.*

**Volume presets:** Adjust the volume for the available systems (announcements, parking aid, phone, voice etc.).