Touch screen

TOUCH SCREEN USE

- Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.
- Avoid spilling or splashing liquids onto the Touch screen.

TOUCH SCREEN CARE

Do not use abrasive cleaners on the Touch screen. For approved cleaning products, contact your Dealer/ Authorised Repairer.

TOUCH SCREEN SETUP

Select **Setup** from the **Home menu**.

The set up screen is divided into categories:

- Screen.
- System.
- Voice.
- Audio.

SCREEN SETTINGS

Volume pop-up: Displays the Volume pop-up on/off icon.

Screensaver: Change screensaver.

Time out home: Sub-menu selection screens can be set to revert to the **Home menu** after a predetermined length of time.

Theme: Changes appearance of the Touch

screen soft keys.

SYSTEM SETTINGS

Button feedback: Select to turn the soft key confirmation tone on/off.

Clock adjust: Select **12** or **24** hour clock. Set the current time. Select **Date** to change the date, or to alter the date format. Select **Set**, to store new settings.

Note: The clock can also be adjusted from the Touch screen time display.

Home menu shortcuts: Select up to 2 items from the displayed list to appear as shortcuts on the Home menu. Select Clear to deselect highlighted items.

Language: Select the required language. Select Male or Female voice. Touch Change to select alternatives for voice and text displays. Follow the on-screen instructions to confirm.

Note: Some languages are not yet available for both System display text and Voice control. In this event, it will be necessary to select a separate language for Voice control.

Volume presets: Adjust the volume for the available systems (announcements, parking aid, phone, voice etc.).