

# Controls overview

## DRIVER CONTROLS

1. Map reading lamp switch **40**.
2. Main interior lamp switch **40**
3. Passenger airbag warning lamp **28**.
4. Sunroof switches **49**
5. Lighting/direction indicator/Trip computer **38**.
6. Audio controls **85**
7. Instrument panel, warning lamps and Message centre **34**.
8. Message centre control.
9. Wiper/washer controls **41**
10. Engine START/STOP **69**
11. Audio system and controls **85**.
12. Touch screen. **51**.
13. CD eject. **85**.
14. Dynamic Stability Control (DSC) off **35**.
15. Hill Descent Control (HDC) **83**.
16. Central locking, lock.
17. Central locking, unlock.
18. Parking aid switch. **77**.
19. Intelligent stop/start. **71**.
20. Hazard warning lamps.
21. Climate control **55**.
22. Air Conditioning (A/C) on/off **55**.
23. Electric Parking Brake (EPB) **76**.
24. Terrain response **81**
25. Gear selector **72**
26. Climate control recirculation on/off switch **55**.
27. Heated steering wheel.
28. Telephone and voice recognition **107**.
29. Horn.
30. Steering column adjustment lever **16**.
31. Cruise control switches **80**.
32. Exterior mirror adjustment **44**.
33. Window switches **49**.
34. Rear window isolator **49**.
35. Interior illumination control **39**.

