

- Lightly push in the thumb catch at the top of the support strut. Lift and lightly pull away to release the top of the strut.
  - Remove the glove box by lightly pulling towards the rear of the vehicle to release it from the lower clips.
  - Lift up the flap in the insulation material, to access the fuse board.
  - A label on the rear of the glove box will show the fuse numbers and positions.
3. Luggage compartment fuse box.
- The fuse numbers and positions are shown on the inside of the fuse box cover.

## CHANGING A FUSE



Fit Land Rover approved replacement fuses of the same rating and type, or fuses of a matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.



If the replacement fuse blows after installation, the system should be checked by a Dealer/Authorised Repairer.

**Note:** Land Rover recommend that relays should only be replaced by qualified personnel.

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.

**Note:** Spare fuses and a puller are located in the passenger compartment fuse box.