

Fuses

- Lightly push in the thumb catch at the top of the support strut. Lift and lightly pull away to release the top of the strut.
- Remove the glove box by lightly pulling towards the rear of the vehicle to release it from the lower clips.
- Lift up the flap in the insulation material, to access the fuse board.
- A label on the rear of the glove box will show the fuse numbers and positions.

3. Luggage compartment fuse box.

- The fuse numbers and positions are shown on the inside of the fuse box cover.

CHANGING A FUSE

 Fit Land Rover approved replacement fuses of the same rating and type, or fuses of a matching specification. Using an incorrect fuse, may result in damage to the vehicle's electrical system and can result in a fire.

 If the replacement fuse blows after installation, the system should be checked by a Dealer/Authorised Repairer.

Note: *Land Rover recommend that relays should only be replaced by qualified personnel.*

Always switch off the ignition, and the affected electrical circuit, before replacing a fuse.

Note: *Spare fuses and a puller are located in the passenger compartment fuse box.*