
TELEPHONE SYSTEM OVERVIEW

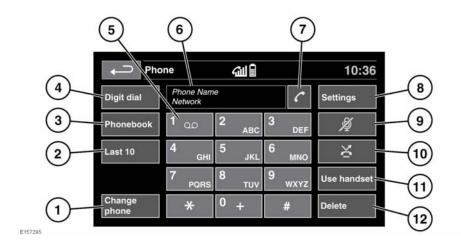

- **1. Change phone**: Search for new or change to another paired phone.
- **2. Last 10**: Access the last 10 dialled, received and missed calls.
- Phonebook: Access the downloaded phonebook.
- 4. Digit dial: Access Digit dial mode.
- 5. Touch and hold to retrieve your Voicemail.
- **6.** Status display: Displays the name and/or number dialled and call duration.
- 7. Call Connect/Disconnect icons: Touch to send/accept or end/reject a call.
- Settings: Access Voicemail setup, Answer options and Phone options.
- Mute microphone: Initiate Privacy mode. While selected, the caller will not hear you talking.
- Auto reject: When active, any incoming calls will be rejected or diverted to voicemail (depending on mobile phone settings).
- **11. Use handset**: Switch the call to your mobile phone.

 Delete: Touch to delete the last entered digit, and hold to delete the whole entered number.

BLUETOOTH® INFORMATION



Bluetooth® is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover **Bluetooth**® wireless technology system supports **Bluetooth**® Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

Note: HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.