


## TELEPHONE SYSTEM OVERVIEW

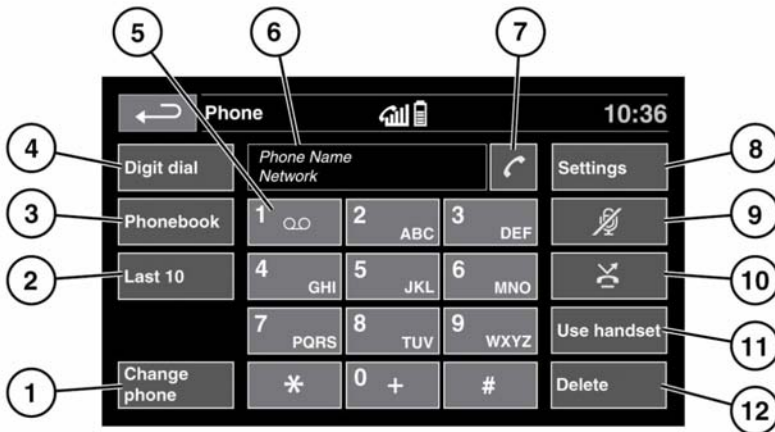

E157295

1. **Change phone:** Search for new or change to another paired phone.
2. **Last 10:** Access the last 10 dialled, received and missed calls.
3. **Phonebook:** Access the downloaded phonebook.
4. **Digit dial:** Access Digit dial mode.
5. Touch and hold to retrieve your Voicemail.
6. **Status display:** Displays the name and/or number dialled and call duration.
7. **Call Connect/Disconnect icons:** Touch to send/accept or end/reject a call.
8. **Settings:** Access Voicemail setup, Answer options and Phone options.
9. **Mute microphone:** Initiate Privacy mode. While selected, the caller will not hear you talking.
10. **Auto reject:** When active, any incoming calls will be rejected or diverted to voicemail (depending on mobile phone settings).
11. **Use handset:** Switch the call to your mobile phone.
12. **Delete:** Touch to delete the last entered digit, and hold to delete the whole entered number.

## BLUETOOTH® INFORMATION



**Bluetooth®** is the name for short-range Radio Frequency (RF) technology that allows electronic devices to communicate wirelessly with each other.

The Land Rover **Bluetooth®** wireless technology system supports **Bluetooth®** Hands-Free Profile (HFP), Advanced Audio Distribution Profile (A2DP) and Audio Video Remote Control Profile (AVRCP).

**Note:** *HFP and A2DP/AVRCP profiles can be connected independently, so a phone can be connected via one, while a media device can be connected via the other, at the same time.*