

## AIRBAG SYSTEM



**WARNING: The components that make up the airbag system are sensitive to electrical or physical interference, either of which could easily damage the system and cause inadvertent operation or a malfunction of the airbag module.**

To prevent malfunction of the airbag system, always consult your Dealer/Authorised Repairer before fitting any of the following:

- Electronic equipment such as a cell phone, 2-way radio, or Audio system.
- Accessories attached to the front of the vehicle.
- Any modification to the front of the vehicle.
- Any modification involving the removal or repair of any wiring or component in the vicinity of any of the airbag system components, including the steering wheel, steering column, instrument or fascia panels.
- Any modification to the fascia panels or steering wheel.

## ANTI-THEFT SYSTEM



**No modifications or additions should be made to the anti-theft system. Such changes could cause the system to malfunction.**

## SERVICE INTERVAL INDICATOR

An upcoming service interval will be notified to the driver via the Message centre, as either a distance or time left until service is due. Once the distance or time are exceeded, the display will show a negative value (-) to indicate that a service is overdue.

One or both types of service interval (distance and time) may be displayed.

## OWNER MAINTENANCE



Any significant or sudden drop in fluid levels, or uneven tyre wear, should be reported to a qualified technician without delay.

In addition to the routine maintenance, a number of simple checks must be carried out more frequently.

## DAILY CHECKS

- Operation of lamps, horn, direction indicators, wipers, washers, and warning lamps.
- Operation of seat belts and brakes.
- Look for fluid deposits underneath the vehicle that might indicate a leak.

## WEEKLY CHECKS

- Engine oil level.
- Engine coolant check.
- Brake/clutch fluid level.
- Power steering fluid level.
- Screen washer fluid level.
- Tyre pressures and condition.
- Operate air conditioning.

***Note: The engine oil level should be checked more frequently if the vehicle is driven for prolonged periods at high speeds.***

## BRAKE PADS

It is recommended that brake pads should be replaced when they reach a minimum thickness of 3mm.