


## 2. 3.5 mm AUX socket.

 Do not plug non-audio devices into the USB port.

**Note:** Use the cable supplied with your media device to connect to the USB socket.

**Note:** A USB hub cannot be used to connect more than 1 USB device to the audio unit.

**Note:** Devices connected to the USB ports will be charged, but devices that are fully discharged will not play.

**Note:** In some cases if an iPhone is connected via a USB cable for music and also to a **Bluetooth®** wireless technology device for other phone functions, the audio will stream through only the last connected port. For example, if a **Bluetooth®** wireless technology device is the last connection made to the iPhone and the iPod lead is connected, no audio will be heard through the speakers via the iPod lead. Track title and time information will still be shown on the display. Audio output from the speakers will only be obtained if the user chooses Audio mode on the **Bluetooth®** wireless technology device. To address this issue, disconnect and reconnect your device's USB cable, or open the iPod application on the iPhone, select the **Bluetooth®** icon and select Dock Connector on the pop up.

When an iPod is connected, playback will continue from the point at which it was last playing, provided the iPod battery is in a good state of charge.

**Note:** Options, such as **Repeat** and **Mix**, relate to the device currently playing; they will not apply to any subsequent device.

The 3.5mm AUX socket allows extra equipment (for example, personal stereos, MP3 players, hand-held navigation units, etc.) to be connected to the Audio system.


**Note:** iPod shuffle may be connected via the AUX socket.

## PLAYING A PORTABLE DEVICE


If you are using a USB mass storage device or approved iPod, you can control playback using the Touch screen controls.

If you are using a **Bluetooth®** wireless technology device, you can control playback using the Touch screen, but some controls are unavailable.

If you are using any portable media device via the AUX socket, then you must control playback from the device itself.

 Land Rover does not recommend the use of a Hard Disc Drive via the USB link while the vehicle is in motion. These devices are not designed for in-car use and may be damaged.

## CONNECTING MULTIPLE DEVICES

 Do not plug non-audio devices into the USB port.

You can connect multiple devices simultaneously to the portable media interface and switch between them using the Touch screen. Select **iPod**, **USB**, **Bluetooth** or **AUX**, to switch between modes.

The device docked first will remain the active device until you choose to change.

If, after changing to the newly-docked device, you change back to the first device, play will resume at the point you left it (USB and iPod only).

**Note:** You cannot use a USB hub to connect more than 1 USB device to the audio unit.

**Note:** Devices connected to the iPod and USB ports will be charged, but devices that are fully discharged will not play.

**Note:** Options, such as **Repeat** and **Shuffle**, relate to the device currently playing, they will not apply to any subsequent device.