


## TOUCH SCREEN HOME MENU

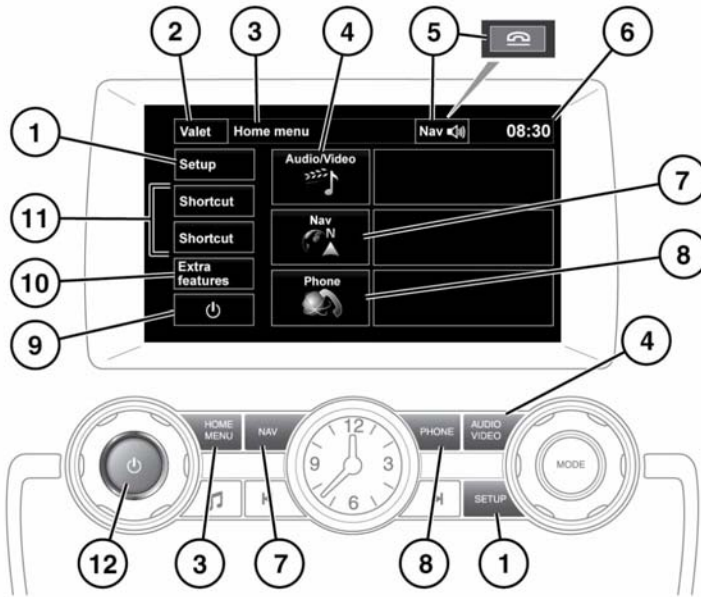

E156991

- ⚠ Always run the engine during prolonged use of the Touch screen. Failure to do so may discharge the vehicle's battery; preventing the engine from starting.
  - ⚠ Avoid spilling or splashing liquids onto the Touch screen.
1. Press to select the Touch screen **Setup** menu.  
*Note: Depending on the specification of your vehicle, this will be either a Touch screen soft key, or a button on the instrument panel.*
  2. Touch to select **Valet** mode. During menu mode, the icon is changed to the Back soft key, touch to return to the previous screen displayed.
  3. Press to select the **Home menu**.
  4. Touch or press to select the **Audio/Video** menu, see **85, AUDIO/VIDEO CONTROLS**.
  5. While navigation is operating, touch to repeat the last given navigation instruction. During a phone call, the icon is changed; touch to end the call.
  6. Touch to adjust the time/date.
  7. Touch or press to select the **On road Navigation** menu. The current set destination is displayed.
  8. Touch or press to select the **Phone** menu.
  9. Press to turn the screen on/off.
  10. Press to select the **Extra features** menu.
  11. To change the shortcuts, see **52, TOUCH SCREEN SETUP**.
  12. Press to turn the Audio system on/off.