

Unless required or prohibited by law, Daytime running lamps can be disabled or enabled by your Dealer/ Authorised Repairer.

 
HEADLAMPS - CONDENSATION

Misting of lamp lenses can occur under some atmospheric conditions. This will not affect the performance of the lamps and will clear during normal operation.

HEADLAMPS - DRIVING ABROAD

The headlamp beam pattern is suitable for driving on either side of the road. There is no need for any mechanical adjustment or external decals.

HEADLAMP LEVELLING



Use the headlamp levelling control to account for vehicle loading changes.

| Vehicle load | Switch position |
|------------------------------------|---------------------------------|
| Driver only | 0 |
| Driver and front seat passenger | 0 |
| Driver and passengers in all seats | Rotate down 1 position from 0. |
| Maximum gross vehicle weight | Rotate down 2 positions from 0. |
| Maximum rear axle load | Rotate down 3 positions from 0. |