The Parking aid system will remain off until reverse gear is selected, or the system is manually enabled again while the vehicle is moving forward.

The Parking aid system is automatically activated when reverse gear is selected.

The Parking aid system assists the driver while manoeuvring the vehicle in confined spaces. When active, object tracking along the front and rear of the vehicle will be displayed in the Touch screen.

**Note:** If the system does not detect an object likely to come into close proximity with the vehicle, it will not display any tracking information in the Touch screen.

When in reverse gear, both the front and rear sensors are active, when in a forward gear, only the front sensors are active.

When objects are detected, the Parking aid system will emit a warning tone which increases in frequency as the vehicle gets closer to an object. The tone becomes constant when the obstacle is within 300 mm (12 inches).

**Note:** The warning tone will stop when the distance between the vehicle and the object remains constant.

The Parking aid system operates at speeds up to 16 km/h (10 mph).

## CLEANING THE SENSORS



When washing the vehicle do not aim high pressure water jets directly at the sensors. Do not use abrasive materials or hard/sharp objects to clean the sensors. Only use approved vehicle shampoo.

The sensors should be kept clean to maintain accuracy and performance.

## PARKING AID SYSTEM FAULT

If a system fault is detected, a long high-pitched tone will sound, the switch indicator will flash. Also a graphic and the message Parking Aid is not available. Please consult your dealer will be displayed on the Touch screen. Contact a Dealer/Authorised Repairer as soon as possible.


## REAR CAMERA



It remains the driver's responsibility to detect obstacles and estimate the vehicle's distance from them when reversina.



Some overhanging objects or barriers which could cause damage to the vehicle, may not be detected by the camera.

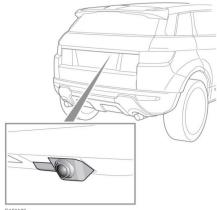

E153429

When reverse gear is selected, the screen automatically displays a wide angle, colour image from the rear of your vehicle.

The rear view camera system provides a rear view image to assist in reversing the vehicle. Overlaid on the image are reversing guidelines.

## Parking aids

**Note:** The rear view images and menu options are dependent on the specification of the rear view camera fitted to the vehicle.


To adjust the camera settings while in reverse, touch anywhere on the Touch screen to display the user options or select **Extra features**, from the Home menu, touch **Cameras** and select **Settings**.


**Note:** A camera icon will be displayed on the user options screen, when selected from **Extra features**. Touch the camera icon, to return to the rear view camera screen.

**Note:** The rear camera display has priority over the Parking aids display. To cancel the camera display at any time, push the **Home Menu** button or touch the back soft key.

Rear view camera display on the Touch screen will discontinue when either of the following apply:

- A forward gear is selected for longer than 5 seconds.
- A forward gear is selected and/or vehicle speed is greater than 18 km/h (11 mph).

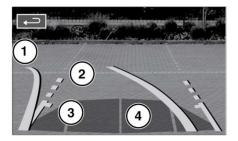

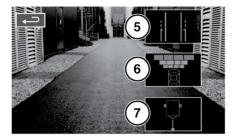

E153094

- 1. Solid line: The projected path based on current steering wheel position.
- 2. Dotted line: The safe working width of the vehicle (including exterior mirrors).
- Tailgate access guideline: Do not reverse beyond this point if tailgate access is required.
- **4.** Parking sensor activation: A coloured area appears, to indicate which rear sensor(s) has been activated.
- 5. Touch to enable/disable (1), (2) and (3).
- Touch to enable/disable the Parking sensor(4).
- Touch to enable/disable Hitch assist guidance lines. (5) and (6) will be disabled when the Hitch assist guidance is active.