

Portable media

 Read the manufacturer's instructions for any device, before it is connected to the audio system. Make sure the device is suitable and complies with any instructions regarding connection and operation. Failure to do so may result in damage to the vehicle's audio system or the auxiliary device.

Connect the device into the appropriate socket.

1. USB socket.
2. 3.5 mm AUX socket.
3. Rear media USB/iPod sockets.
4. Rear media AV sockets.

 Do not plug non-audio devices into the USB port.

Note: Use the cable supplied with your media device to connect to the USB socket.

Note: A USB hub cannot be used to connect more than 1 USB device to the audio unit.

Note: Devices connected to the USB ports will be charged, but devices that are fully discharged will not play.

Note: In some cases if an iPhone is connected via a USB cable for music and also to a **Bluetooth** wireless technology device for other phone functions, the audio will stream through only the last connected port. For example if a **Bluetooth** wireless technology device is the last connection made to the iPhone and the iPod lead is connected, no audio will be heard through the speakers via the iPod lead. Track title and time information will still be shown on the display. Audio output from the speakers will only be obtained if the user chooses audio mode on the **Bluetooth** wireless technology device. To address this issue disconnect and reconnect your device's USB cable or open the iPod application on the iPhone, select the **Bluetooth** icon and select Dock Connector on the pop up.

When an iPod is connected, playback will continue from the point at which it was last playing, provided the iPod battery is in a good state of charge.

Note: Options such as **Repeat** and **Mix** relate to the device currently playing, they will not apply to any subsequent device.

The 3.5mm AUX socket allows extra equipment (e.g. personal stereos MP3 player, hand-held navigation unit, etc.) to be connected to the audio system.

Note: iPod shuffle may be connected via the AUX socket.

Note: On vehicles fitted with Rear Seat Entertainment (RSE), extra Audio/Visual sockets are provided. This allows auxiliary equipment (such as a video game console) to be linked to the rear DVD screens. For fitment information, please refer to the manufacturer's instructions.

PLAYING A PORTABLE DEVICE

If you are using a USB mass storage device or approved iPod, you can control playback using the Touch screen controls.

If you are using a **Bluetooth**® wireless technology device, you can control playback using the Touch screen, but some controls are unavailable.

If you are using any portable media device via the AUX socket, then you must control playback from the device itself.

 Land Rover does not recommend the use of a Hard Disc Drive via the USB link while the vehicle is in motion. These devices are not designed for in car use and may be damaged.

CONNECTING MULTIPLE DEVICES

 Do not plug non-audio devices into the USB port.