

- The bonnet, tailgate or a door is opened.
- Movement is detected within the vehicle's interior.
- A window, front or rear screen or panoramic sunroof glass is broken.
- The vehicle is raised or tilted.

In some markets where a battery backed sounder is fitted the following actions will also sound the alarm:

- The vehicle battery is disconnected.
- An attempt is made to disconnect the alarm siren.

**Note:** *In this state, an open window may cause the alarm to sound due to the movement of air currents. For this reason, make sure all of the windows are fully closed before Double locking the vehicle.*

## LOCK CONFIRMATION

If you are uncertain whether the vehicle is locked and armed (either by Single or Double locking), press either the Smart key lock button or, if Keyless entry is fitted, touch an exterior door handle lock sensor. The hazard warning lamps will flash once to indicate and confirm the current lock status.

**Note:** *If the vehicle is **not** already locked and armed, pressing the lock button will single lock the vehicle. Press again to double lock, if required.*

## AUTOMATIC RELOCKING AND RE-ARMING OF THE ALARM

If a door, the tailgate or the bonnet are not opened within 40 seconds of unlocking the vehicle via the Smart key, all of the doors will re-lock automatically to the previous locked state and the alarm will re-arm.

## MISLOCK

When locking the vehicle with the Smart key a mislock can occur if:

- One or more of the doors, the bonnet or the taildoor is not fully closed.
- The ignition is ON.
- A Smart key is left in the vehicle.

If any of the above are present, the vehicle will NOT lock and there will be an audible mislock error warning. The hazard warning lamps will NOT flash and the door mirrors (if enabled) will NOT fold in. Check that all of the doors, the bonnet and the tailgate are closed properly. Make sure the ignition is turned OFF and lock the vehicle again. If the mislock persists, consult your Dealer/Authorised Repairer.

## GLOBAL CLOSING



**Make sure no children, pets, or obstructions are in any open aperture before operating global closing.**

Make sure all of the doors are closed. Press and hold the Smart key lock button for 3 seconds. The vehicle will single lock and the alarm will be armed immediately. After 3 seconds any open windows will be closed.

Keyless global closing (if enabled) can be operated by touching the door lock sensor for 3 seconds. This will also single lock the vehicle and activate the alarm.

**Note:** *The windows will close only while the door lock sensor is covered. To fully secure the vehicle, continue to touch the door lock sensor until all the windows are fully closed.*

**Note:** *Global closing can be enabled and disabled via the **Vehicle Set-up Instrument panel menu**. See **40, INSTRUMENT PANEL MENU**.*