


VIDEO MEDIA PLAYER CONTROLS

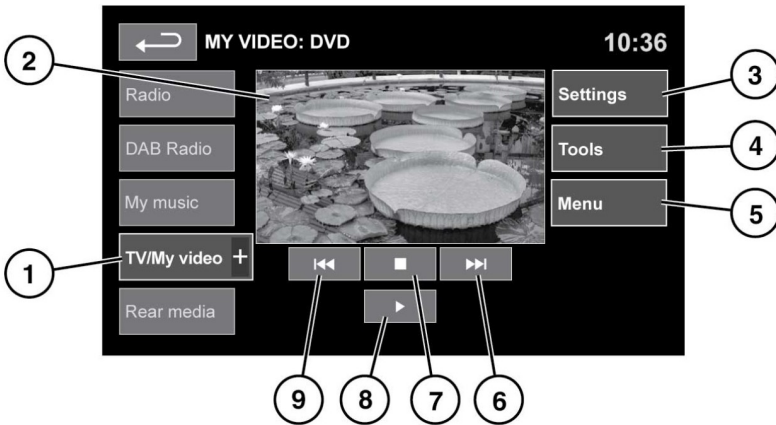

E156982



In the interest of safety, only operate, adjust or view the system when it is safe to do so.



Sustained exposure to high sound levels (greater than 85 decibels) can damage your hearing.

- 1. TV/My video:** TV band/video input selection. Touch the **TV/My video** icon to view and select DVD or other forms of video media (CD/USB), provided the relevant media is present. The selected option will be displayed.
- 2.** Preview screen for video media information: Touch to select full screen mode. Short touch the screen again to view the controls at any time. To return to preview mode, touch and hold the full screen view.
- 3. Settings:** Depending on the video media specification, there are 3 sub-menus within settings: **Options**, **VOD** (Video On Demand) and **Audio settings**.
- 4. Tools:** The following options can be selected:
 - GOTO:** The GOTO menu allows you to access specific parts of the video, by **Chapter** or **Title number**.
 - Subtitles.
 - Angle.
 - Audio.
 - Top menu.
- 5. Menu:** Select to view the Video media menu. On some screens this may be replaced by a **Browse** soft key.
- 6.** Seek up: Select to view the next DVD chapter or to scroll through video media files.