

## Maintenance

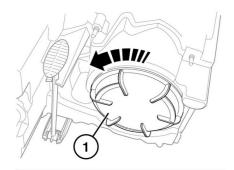


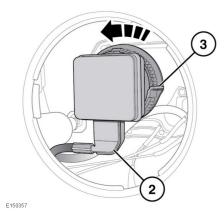

Removing a headlamp bulb:

- At the back of the headlamp unit, remove the cover. Turn it counter clockwise to release.
- The back of the bulb unit will now be exposed. Pull down on the electrical connector to release it from the bulb unit.
- Turn the retaining collar counter clockwise to release the bulb. Remove the bulb unit from the housing.

## DIRECTION INDICATOR BULB REPLACEMENT

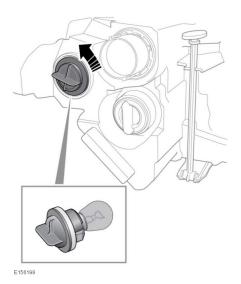

Removing the left side bulb:

To gain more room for accessibility, follow steps 1 and 2 for moving the left side headlamp unit.

At the back of the headlamp unit, remove the indicator bulb housing, turn it counter clockwise to release.

