


## ELECTRIC WINDOWS AND PANORAMIC ROOF BLIND

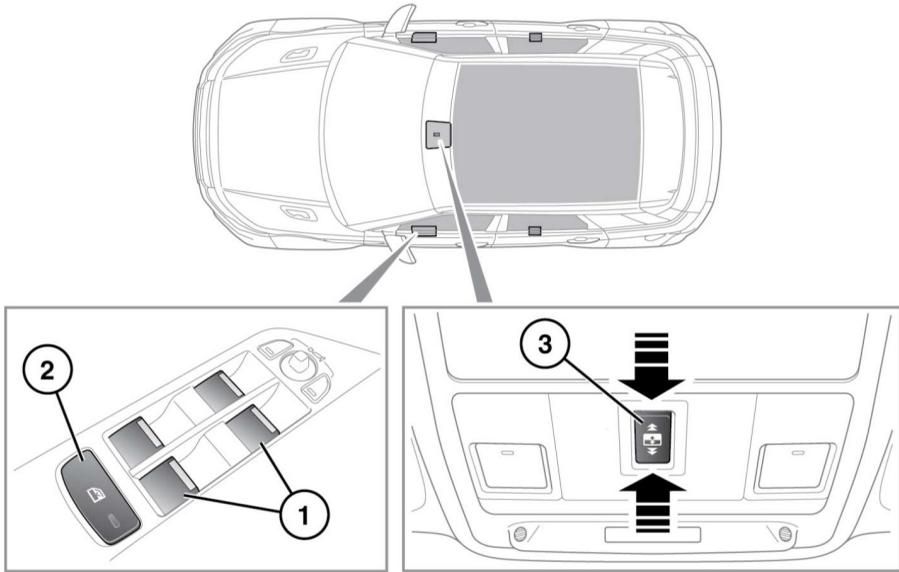

E 155594



**To prevent accidental operation, never leave the Smart key in the vehicle if children or animals are also left in the vehicle.**

1. **Window switches:** Briefly pull a switch fully up and release, the window will continue to rise until fully closed. Briefly press a switch fully down and release, the window will continue to lower until fully open. Pressing or pulling a switch again will stop the window.  
The windows will operate for 5 minutes after the ignition is switched off, as long as none of the doors are open.  
Rear windows have a short drop feature for passenger comfort. The first press of a switch will lower the window a short distance to give a flow of air. A second press will lower the window to its full extent.

If a resonance or booming sound occurs when a rear window is open, lowering an adjacent front window by approximately 25 mm (1 inch) will eliminate the condition.

**Note:** Coupe models have fixed rear windows and a different switch pack.

2. **Rear window isolator switch:** The rear windows are isolated when the indicator light in the switch is illuminated.
-  **If children are carried in the rear seats, the isolator switch should be used to prevent operation of the windows. If the windows are operated by young children there is a risk of serious injury or death.**
3. **Roof blind open/close switch:** To open the blind, push from the rear of the switch and release. The blind will slide fully open.