

## VOICE SETTINGS

- **Command list:** Pressing the 'I' soft key next to any command will display alternative ways of saying the same command.
- **Voicetags:** View the categories. Select a category to manage the Voicetags for the chosen system. See **154, VOICETAGS**.
- **Operating guide:** Select to view some brief Voice system instructions. Select **Voice tutorial** for more detailed Voice system instructions (cancel via the displayed pop-up or by pressing and holding the Voice button).
- **Preferences:** Select to alter the following settings:
  - **Voice profile:** The voice system can be trained to have a greater recognition of a particular voice or accent. The default setting is **Standard**. To build a voice profile for either **User 1** or **User 2**, it is necessary to complete a training programme first.  
To complete the training for the first time, select either **User 1** or **User 2** and follow the on-screen and audible instructions.
  - **Voice feedback:** Select **On/Off**.
  - **Feedback volume:** Adjust using the +/- buttons. It is not possible to reduce the volume to zero.
- **Voice training:** Select to access the voice system training programme, designed to enable the system to better recognise the vocal characteristics of a user. Select **User 1** or **User 2** and follow the on-screen and audible instructions. See **154, VOICE TRAINING**.

The training session can be cancelled at any time by touching the on-screen pop-up or by pressing and holding the Voice button on the steering wheel. See **153, USING VOICE CONTROL**.

## SELECTING VALET MODE

Valet mode allows the vehicle to be driven and locked by a parking attendant, without giving access to the loadspace. Valet mode also prevents operation of the Touch screen, to prevent access to telephone numbers or navigation addresses.

Each time Valet mode is used a Personal Identification Number (PIN) must be entered.

1. From the **Home menu** screen, select **Valet**.
2. Enter a memorable 4 digit PIN. You will be prompted to confirm the PIN. If you wish to cancel the PIN, select **Delete**. If the PIN is cancelled, or incorrectly entered, you will be prompted to enter the PIN again.
3. **Valet mode activated** is displayed to indicate that a PIN has been accepted.

The luggage compartment is now securely locked in Valet mode and the **Valet mode On** screen is displayed.

## DESELECTING VALET MODE

1. When you re-enter the vehicle, select **Valet**.
2. Enter your memorable 4 digit PIN and touch the **OK** button.

**Valet mode deactivated** is displayed to indicate that a PIN has been accepted.

- The luggage compartment will return to the previously set security requirement.
- The Touch screen will be enabled.

**Note:** If the PIN is forgotten, Valet mode can only be deactivated by a Dealer/Authorised Repairer.